


Application Tooling Specification Sheet

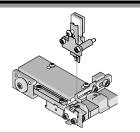

Order No. 63912-5900

FEATURES

T2 Terminator Tooling

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE

Products: 1.20mm (0.47") Pitch Pico-EZmate™ Wire-to-Board Crimp Terminal, 28-30 AWG.


Terminal Order No.	Wire Size			Insulation	Strip Length			
	VVI	e Size	IPC/WHMA-A620 (1)		Terminal (2)		Suip Lengui	
	AWG	mm²	mm	ln.	mm	ln.	mm	ln.
78172-0410	20 20	0.00.0.05	0 50 0 70	000 000	0 50 0 70	000 000	n. mm	.035051
78172-0411	20-30	0.00-0.00	0.50-0.70	.020020	0.50-0.70	.020020		
	78172-0410	Terminal Order No. AWG 78172-0410 28.30	AWG mm² 78172-0410 28-30 0.08-0.05	Terminal Order No. AWG mm² mm 78172-0410 28-30 0.08-0.05 0.50-0.70	Wire Size IPC/WHMA-A620 (1) AWG mm² mm In. 78172-0410 28-30 0.08-0.05 0.50-0.70 0.20-0.28	Terminal Order No. IPC/WHMA-A620 (1) Termin AWG mm² mm In. mm 78172-0410 28-30 0.08-0.05 0.50-0.70 0.20-0.28 0.50-0.70	Wire Size IPC/WHMA-A620 (1) Terminal (2) AWG mm² mm In. mm In. 78172-0410 28-30 0.08-0.05 0.50-0.70 0.20-0.028 0.50-0.70 0.20-0.028	Wire Size IPC/WHMA-A620 (1) Terminal (2) Strip L AWG mm² mm In. mm In. mm 78172-0410 28-30 0.08-0.05 0.50-0.70 020-028 0.50-0.70 020-028 0.90-1.30

 $\pmb{\times}$ Oiler is required for this applicator due to gold plating on terminal.

Oiler order number 63801-7240 (See Part Number 63801-7240 on Molex Web)

- (1) To achieve optimum IPC-A620 insulation crimps, use this insulation OD range.
- (2) Overall insulation OD specification for terminal.

DEFINITION OF TERMS

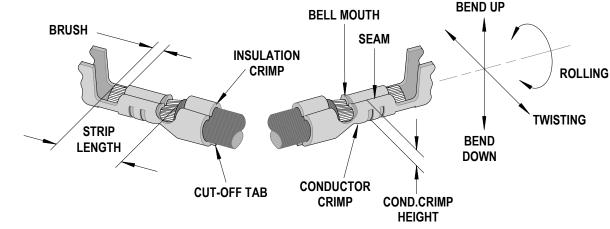

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

Release Date: 10-03-14 Revision Date: 10-03-14 **UNCONTROLLED COPY**

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off Tab	Maximum	Conductor Brush	
reminal Series No.	mm	In.	mm	In.	mm	In.
78172	0.05-0.15	.002006	0.05	.002	0.15-0.70	.006028

Terminal	Bend up Bend down		Twist	wist Roll Punch Width mm (Ref)			(Ref)	Seam Seam shall not be	
Series No.	Degree		Degree		Conductor		Insulation		
Series NO.					mm	In	mm	In	open and no wire allowed
78172	3	3	2	3	0.80	.031	0.80	.031	out of the crimping area

After crimping, the conductor profile should measure the following.

	Wire	Size	Conductor Crimp					Pull Force	
Terminal Series No.	AWG	mm²	Crimp	Height	Crimp Wi	Minimum			
	AWG		mm	In.	mm	In.	Ν	Lb.	
78172	28	0.08	0.44-0.48	.017019	0.85	.033	10.0	2.25	
10112	30	0.05	0.40-0.44	.015017	0.85	.033	5.0	1.12	


	Wire	Size	Insulation				
Terminal Order No.	AWG	mm²	Crimp	Height	Crimp Width (Ref.)		
	AWG		mm	In.	mm	In.	
78172-0410	28	0.08	0.73-0.77	.028030	0.85	.033	
	30	0.05	0.71-0.75	.027029	0.85	.033	
78172-0411	28	0.08	0.77-0.81	.030032	0.85	.033	
10112-0411	30	0.05	0.75-0.79	.029031	0.85	.033	

Tool Qualification Notes:

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.

PARTS LIST


	T2 Terminator 63912-5900								
ltem	Order No	Engineering No.	Quantity						
	•	Perishable	e Tooling						
	63912-5970	63912-5970	Tool Kit (All "Y" Items)	REF					
1	63457-0046	63457-0046	Conductor Punch	1 Y					
2	63455-0059	63455-0059	Conductor Anvil	1 Y					
3	63454-0082	63454-0082	Insulation Punch	1 Y					
4	63456-0054	63456-0054	Insulation Anvil	1 Y					
5	63443-0003	63443-0003	Front Cut-Off Plunger	1 Y					
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y					
		Other Cor	nponents						
7	11-24-1067	4996-4	Cut-off Plunger Spring	1					
8	63443-0009	63443-0009	Scrap Chute	1					
9	63443-0025	63443-0025	Кеу	1					
10	63443-0085	63443-0085	Wire Stop L-Bracket	1					
11	63443-0090	63443-0090	Wire Stop	1					
12	63443-2217	63443-2217	Coarse Spacer (17.00mm)	2					
13	63443-2314	63443-2314	Fine Spacer (3.70mm)	1					
14	63443-2805	63443-2805	Front Plunger Striker	1					
15	63443-2902	63443-2902	Hold Down Plunger	1					
16	63443-6017	63443-6017	Rear Cover	1					
17	63443-7201	63443-7201	Spring Cover	1					
18	63600-0021	63600-0021	Compression Spring	1					
19	63600-2972	63600-2972	Collar	2					
20	63890-0058	63890-0058	Height Spacer	1					
21	63901-1301	63901-1301	Feed Guide	1					
		Fra	me						
22	63800-8800	63800-8800	T2 Terminator	1					
		Hard	ware						
23	N/A	N/A	M3 by 6 Long SHCS	2**					
24	N/A	N/A	M3 by 6 Long FHCS	1**					
25	N/A	N/A	M4 by 6 Long SHCS	2**					
26	N/A	N/A	M4 by 12 Long BHCS	2**					
27	N/A	N/A	M4 by 14 Long SHCS	2**					
28	N/A	N/A	M4 by 30 Long SHCS	2**					
29	N/A	N/A	M4 by 50 Long SHCS	2**					
30	N/A	N/A	M5 by 12 Long SHCS	1**					
31	N/A	N/A	#10-32 by 3/8"Long BHCS	1**					
** Ava	** Available from an industrial supply company such as MSC (1-800-645-7270).								

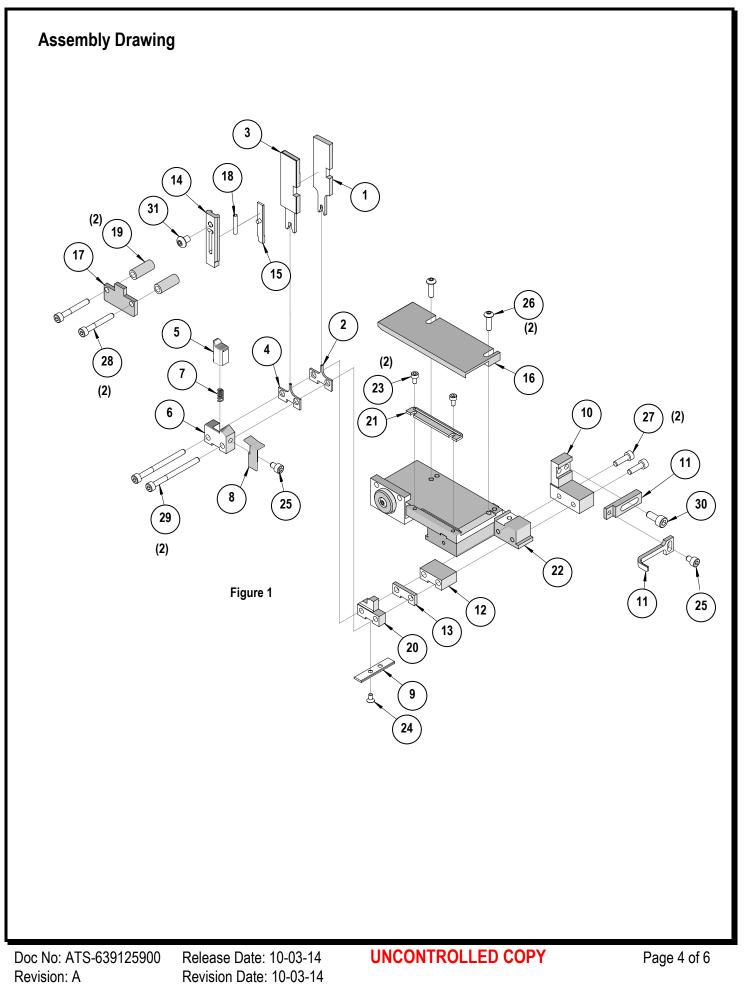

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

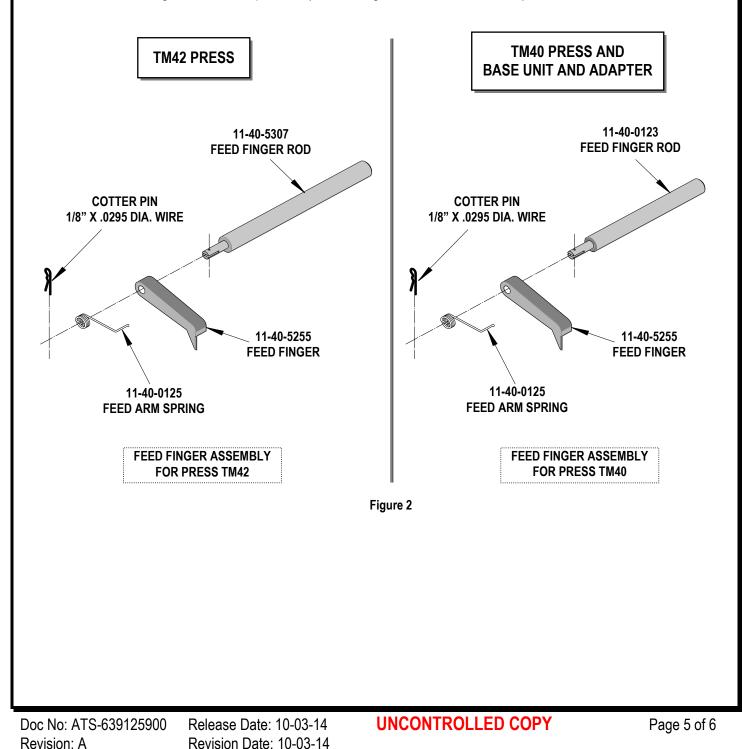

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Visit our Web site at http://www.molex.com

Release Date: 10-03-14 Revision Date: 10-03-14 UNCONTROLLED COPY